




# NOR400 Fitting Instructions

## Tools




Included:  
1 x NOR400 Letterplate  
1 x Intumescent Liner  
Fixing Bolts

All dimensions in mm

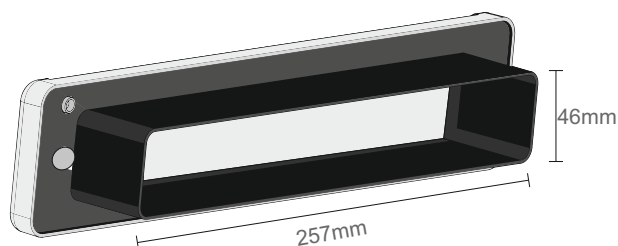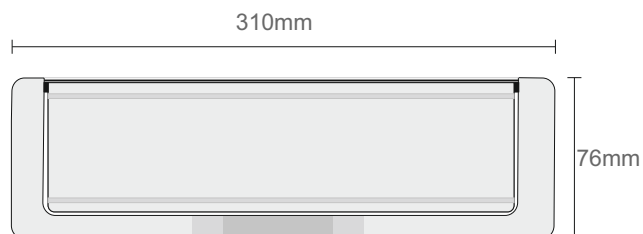

Dimensions without liner



Intumescentliner

**1**




Intumescentliner


**1.1** Remove self-adhesive backing from intumescent liner.

**1.2** Wrap the liner around the outer telescopic sleeve ensuring space is left for the fixings on either side. **Note: do not cut liner, use full length as supplied**

**2**

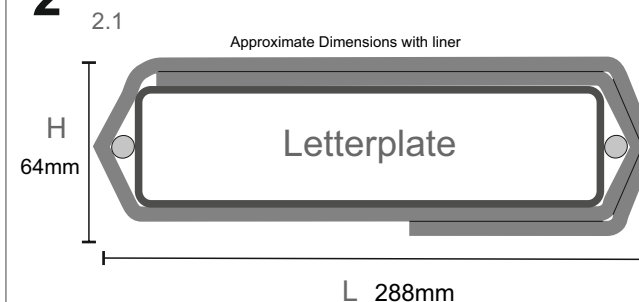

**2.2**

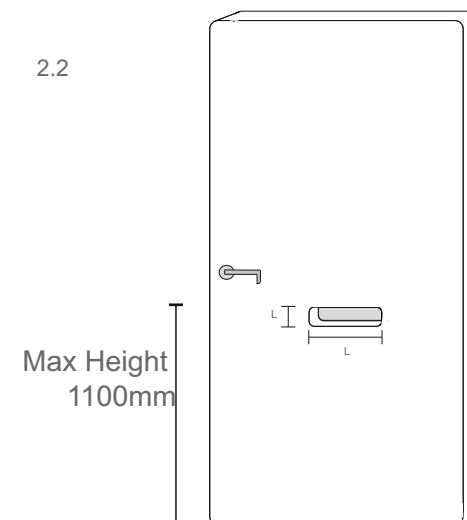


**2.1** You **must** measure the overall diameter of the outer telescopic sleeve with liner to assess **exact** opening size required (L)

**2.2** Using a drill & jigsaw cut aperture in the door leaf to suit (L) ensuring this is no further than 1100mm from the door bottom.

## NOR400 Fitting Instructions

**3**


3.1

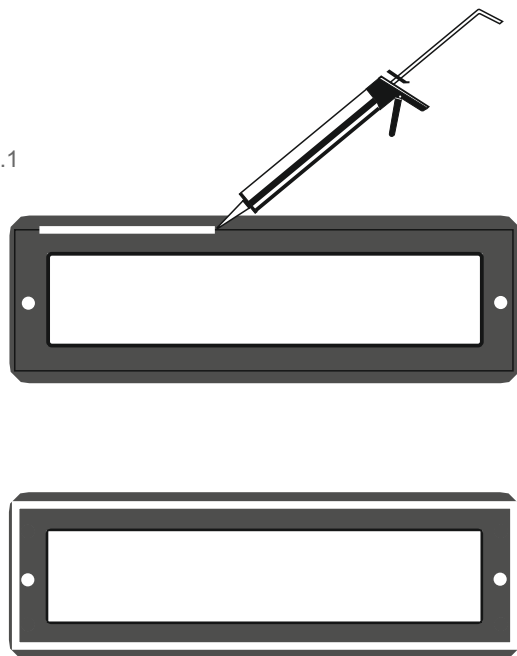


**3.1** Apply a thin layer of intumescent mastic (not supplied) behind both face plates.

**4**

4.1

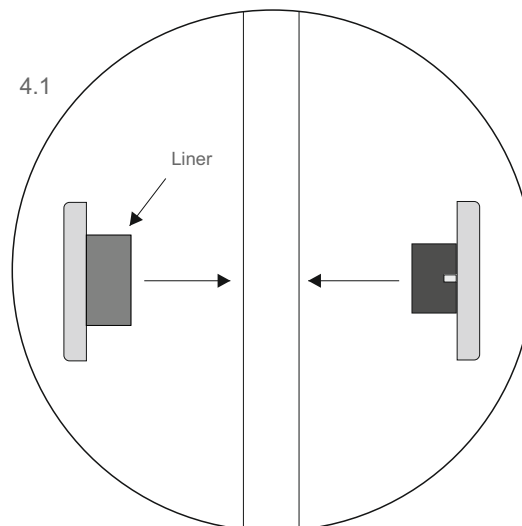

4.2

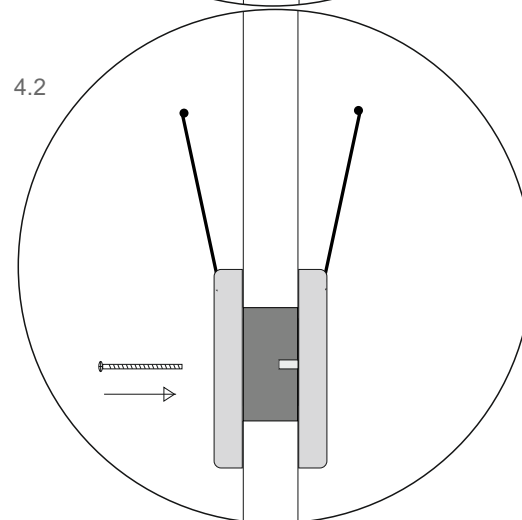


**4.1** Insert each side of the letterbox into the aperture making sure the side with the liner attached is on the inside of the door.

**4.2** Using bolts provided secure letterbox to the door, use appropriate length bolts to suit door thickness.

**5**

5.1

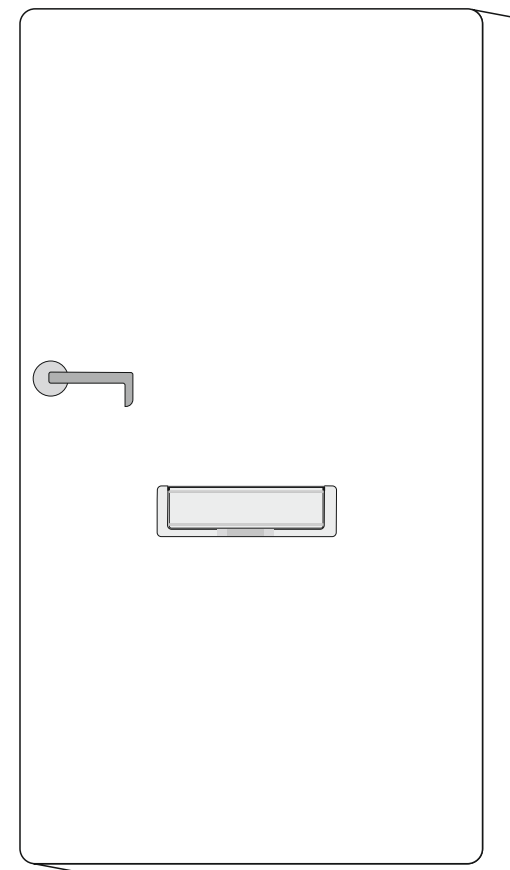

**5.1** Clean off any excess mastic with a damp cloth. The unit is now installed.